


1 / 13


FIG. 1

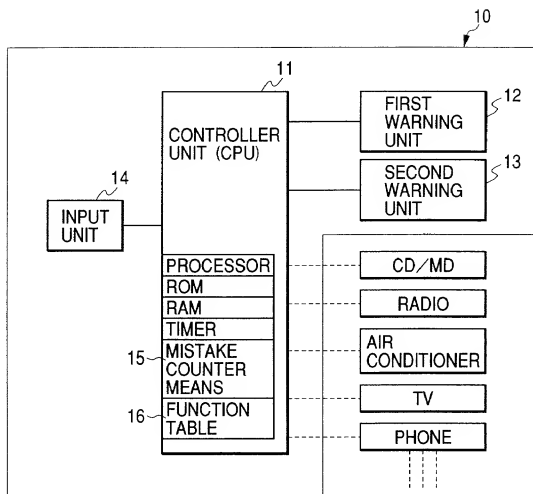

20037088.044201

2 / 13

FIG. 2

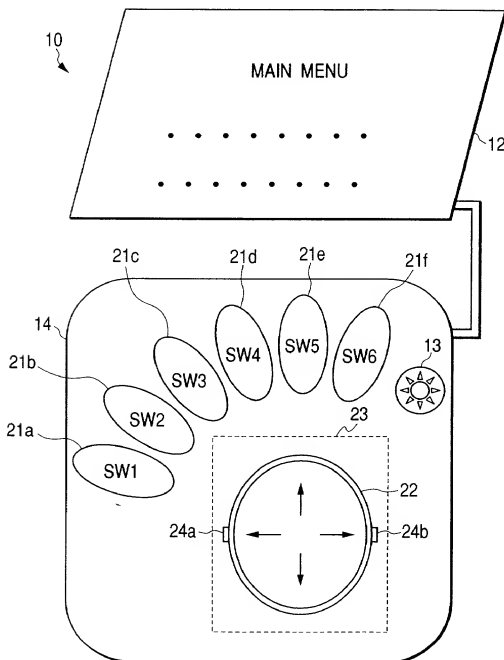

09032908-041901

3 / 13

FIG. 3

FUNCTION SWITCH	ELECTRONIC DEVICE	OPERATING DIRECTION			
		FORWARD	BACKWARD	LEFTWARD	RIGHTWARD
21a	CD (MD)	INCREASE VOLUME	DECREASE VOLUME	NEXT TRACK	PREVIOUS TRACK
21b	RADIO	INCREASE VOLUME	DECREASE VOLUME	CHANNEL UP	CHANNEL DOWN
21c	AIR CONDITIONER 1	*1 SCROLL UP	*1 SCROLL DOWN	RAISE BLOWER POWER	DOWN BLOWER POWER
21d	AIR CONDITIONER 2	FOR DRIVER	FOR NAVIGATOR	RAISE TEMPERATURE	LOWER TEMPERATURE
21e	TELEVISION	INCREASE VOLUME	DECREASE VOLUME	CHANNEL UP	CHANNEL DOWN
21f	PHONE	NEXT PHONE NUMBER	PREVIOUS PHONE NUMBER	HANG UP	CALL UP

*1 THE BLOWER OUTLET WILL BE SWITCHED AS FOLLOWS :

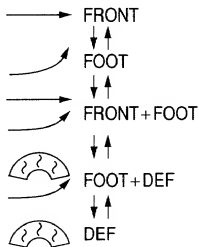



FIG. 4

FUNCTION SWITCH	COUNTED MISTAKES
21a	0
21b	1
21c	2
21d	0
21e	0
21f	1

09837988-041901
100119-0062860


5 / 13

FIG. 5

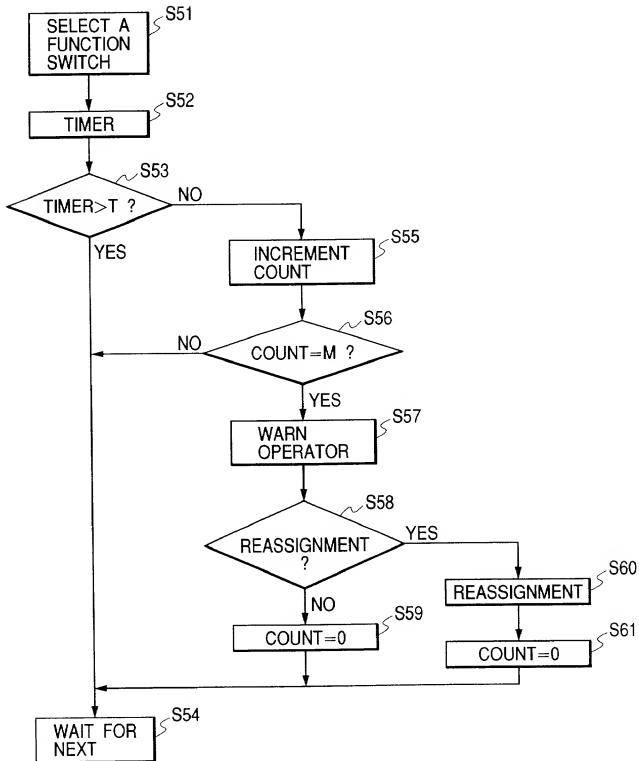

6 / 13

FIG. 6

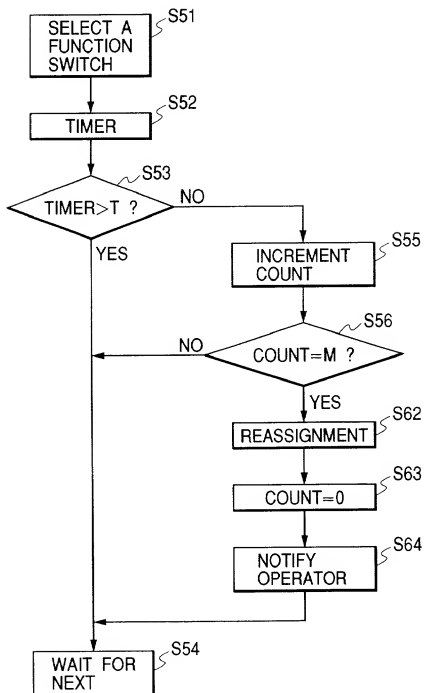

00037983, 041304
TOTAL 0" 9967880

7 / 13

FIG. 7


EXAMPLE OF COUNTS STORED IN COUNTER

DIRECTION	COUNT
FORWARD	0
BACKWORD	1
LEFT	1
RIGHT	0

03837988-041901
TOPPUB-8862882


8 / 13

FIG. 8

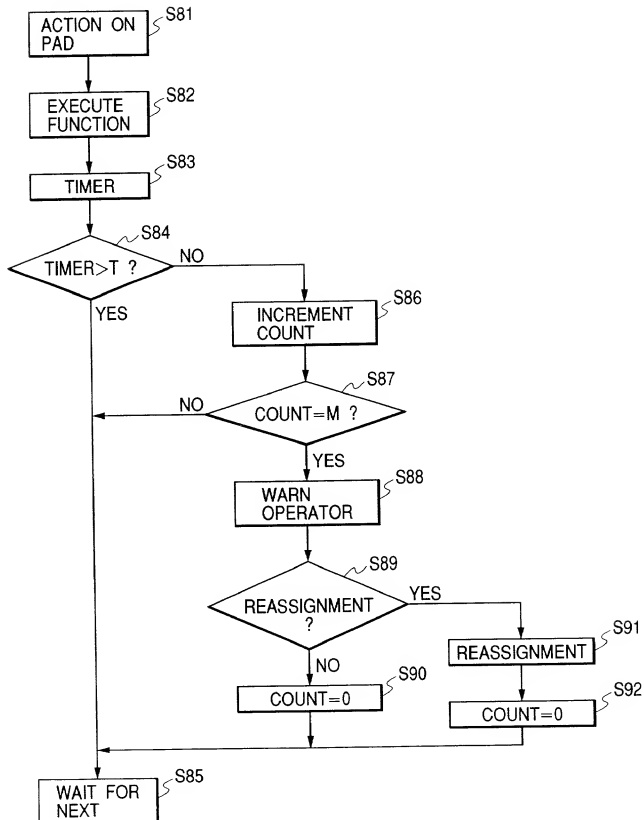

9 / 13


FIG. 9

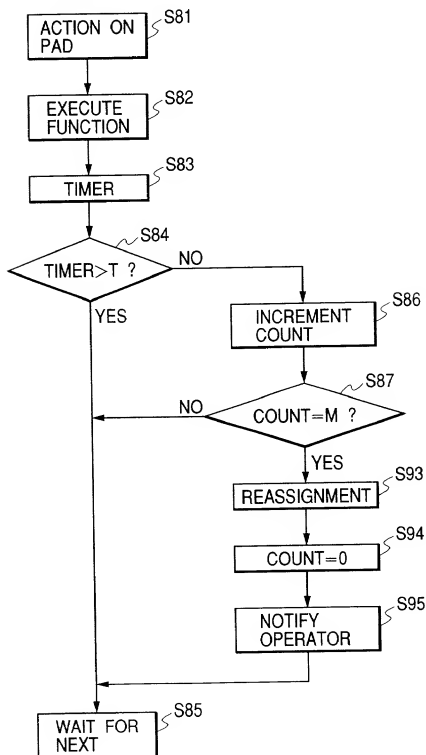

000379008-041901

10 / 13

FIG. 10 PRIOR ART

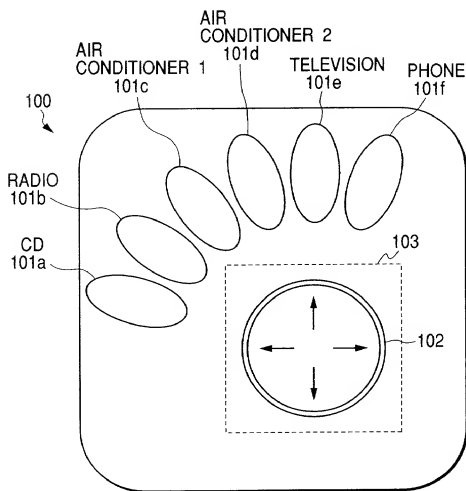

09837988-041961
T06740-8862860

11/13

FIG. 11 PRIOR ART


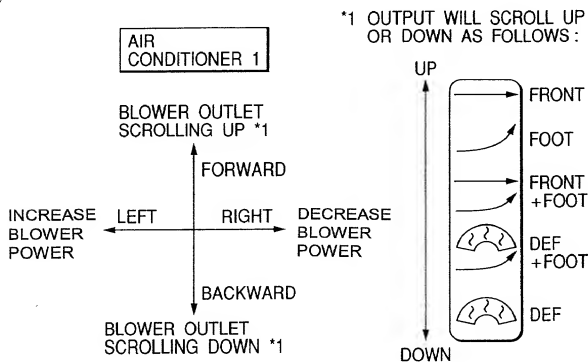


FIG. 12 PRIOR ART

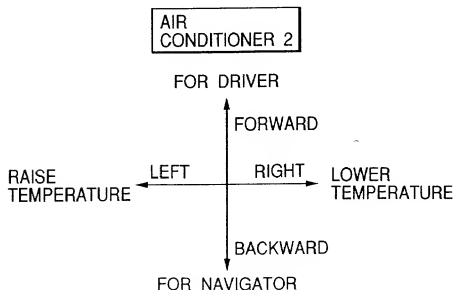

12 / 13

FIG. 13 PRIOR ART


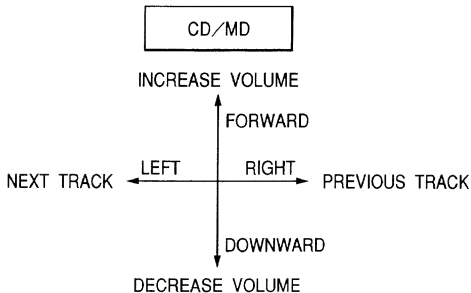


FIG. 14 PRIOR ART

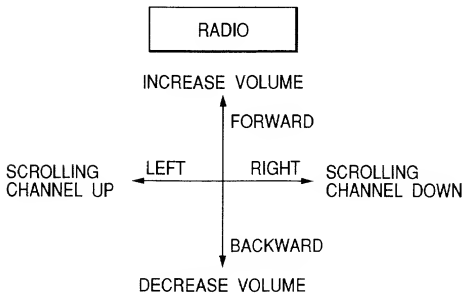

13 / 13

FIG. 15 PRIOR ART

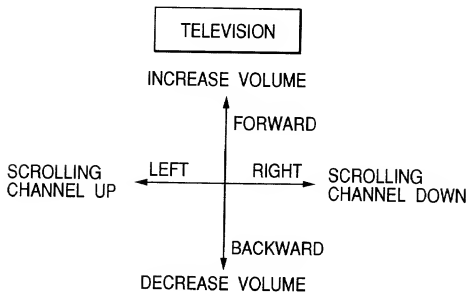


FIG. 16 PRIOR ART

